



- ① Plywood Roof Deck
- ② SOPREMA Primer and SOPREMA Vapour Barrier
- ③ PIR Thermal Insulation Board and SOPREMA PU Adhesive
- ④ SOPREMA Adhesive
- ⑤ SOPREMA FLEECE BACK TPO waterproofing membrane
- ⑥ Welding
- ⑦ SOPREMA TPO Metal 40×40 mm angle fixed at 150 mm centres
- ⑧ SOPREMA contact adhesive
- ⑨ SOPREMA TPO waterproofing membrane
- ⑩ Pressure termination bar fixed at 150 mm centres
- ⑪ SOPREMA M-1 Sealant
- ⑫ Cladding by others
- ⑬ SOPREMA Sopraseal stick VP FR

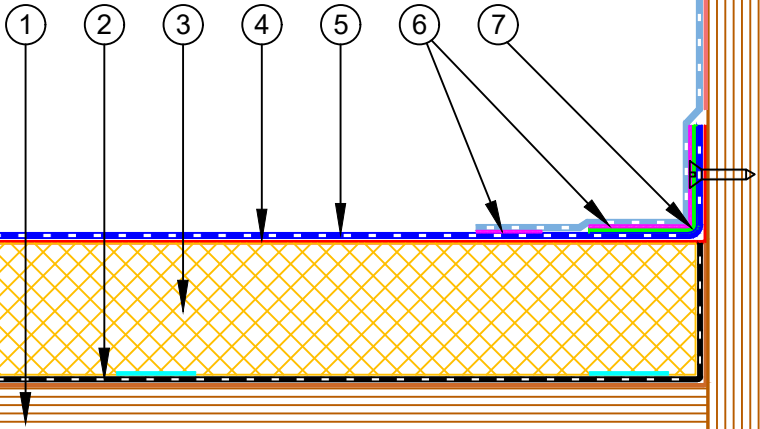

PROJECT :	Insulated Plywood with Fleece Back TPO system				
TITLE :	C-Profile Termination under Cladding				
NUMBER :	TFIRP-D2e		SCALE :	NTS	
DRAWN BY :	NKT	DATE :	09-Jun-2026	REVISED :	

This detail is intended as a guide only to waterproofing. The guidelines are general and refer to typical applications only. No part of this detail is intended to override or supersede architectural and engineering specifications or the National Construction Code, Building Code of Australia and Australian Standards. Advice from qualified professionals should be sought if there is an apparent conflict between these details and not override any legislative requirements of the States and Territories. All components must be supplied by SOPREMA. SOPREMA reserves the right to alter or upgrade details at any time without prior notice.

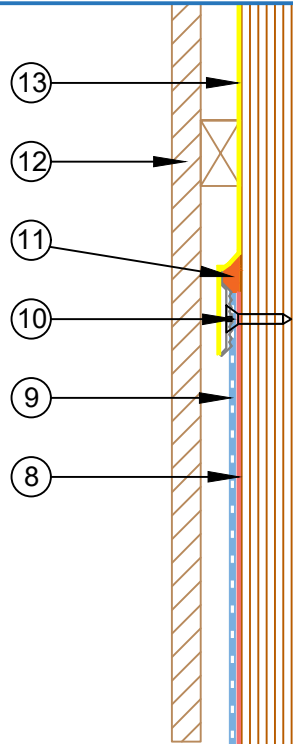