


- ① Plywood Deck
- ② SOPREMA Primer
- ③ SOPREMA Base sheet
- ④ SOPREMA Cap sheet
- ⑤ SOPREMA M1 Structural Sealant
- ⑥ SOPREMA E-Curb
- ⑦ SOPREMA 1-Part Pourable Sealant
- ⑧ 3 MM Foam tape on the underside of Baseplate
- ⑨ M10 Hus Screw
- ⑩ Neoprene Washer

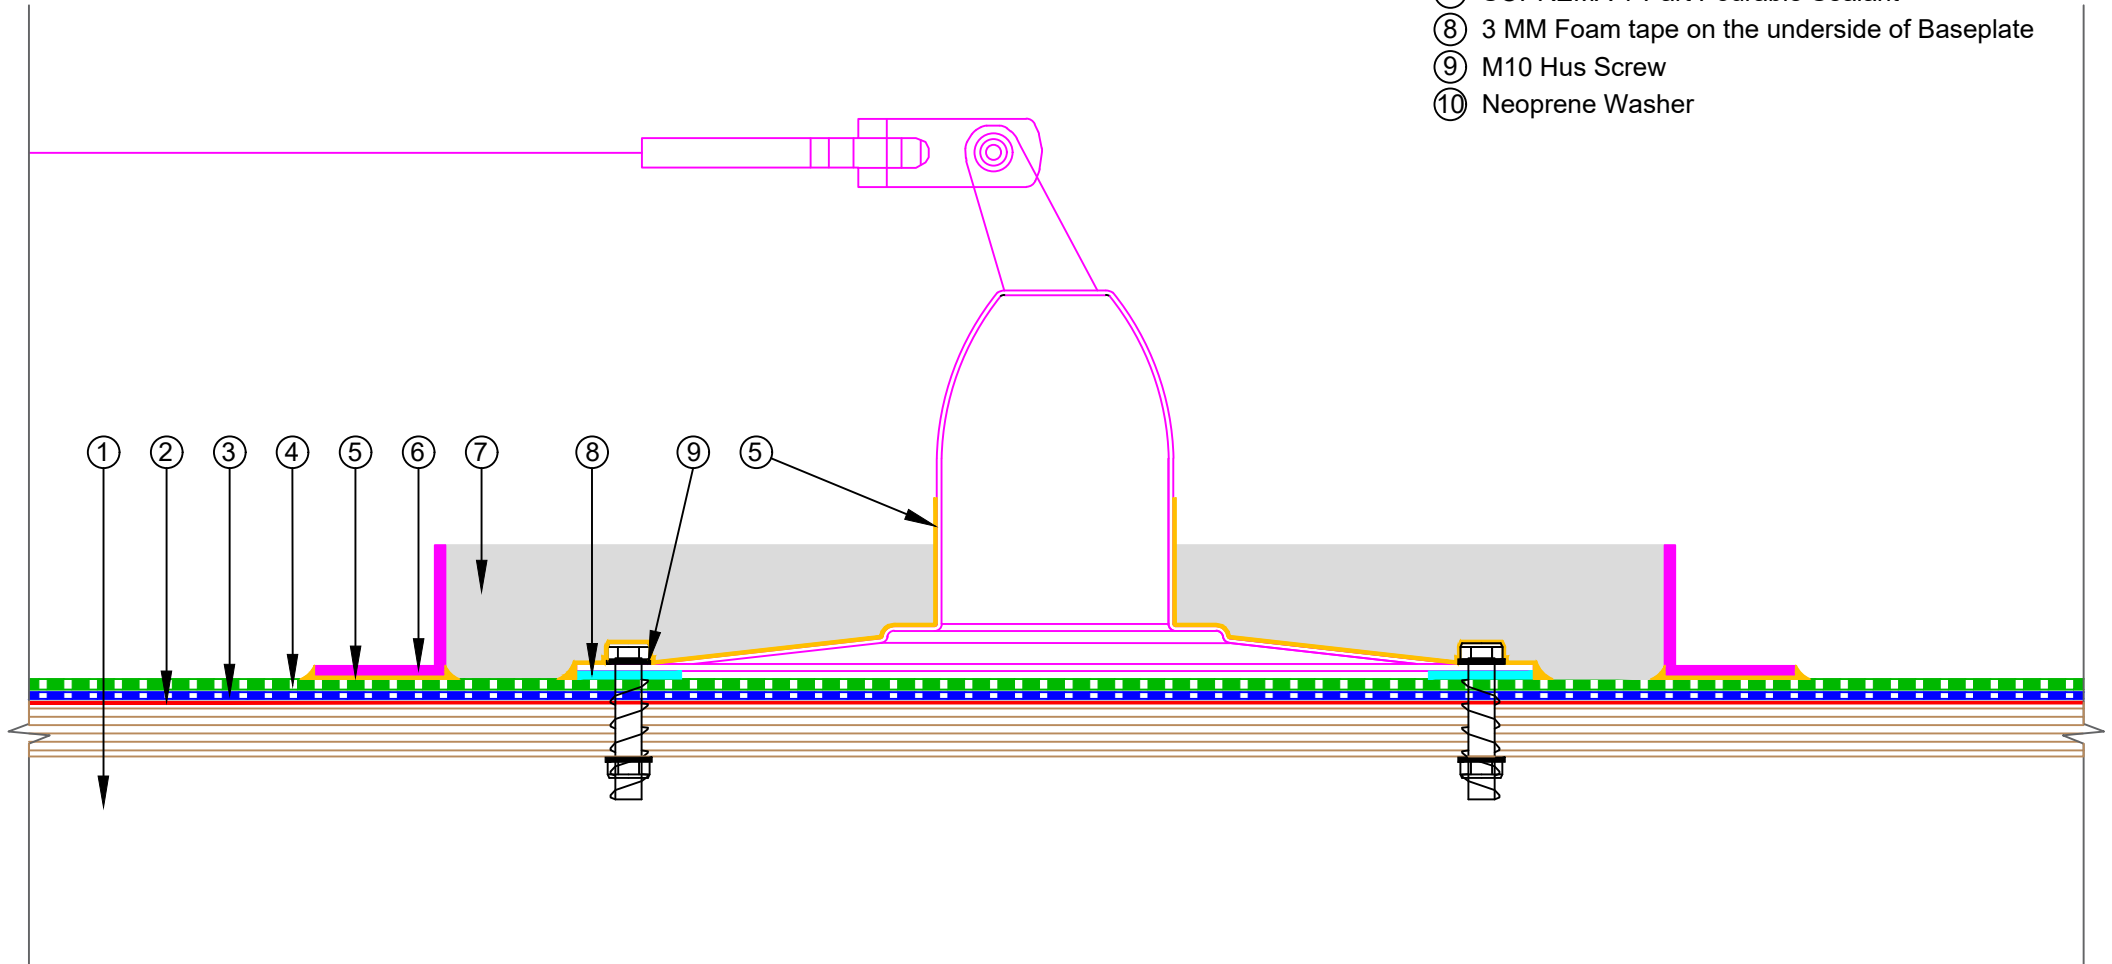

PROJECT :	Bituminous 2 Layers Membrane System : Non-Insulated Roof on Plywood				
TITLE :	Safebro 2 Cable				
NUMBER :	BTNRP-D6a			SCALE :	NTS
DRAWN BY :	NKT	DATE :	06-Aug-2026	REVISED :	

This detail is intended as a guide only to waterproofing. The guidelines are general and refer to typical applications only. No part of this detail is intended to override or supersede architectural and engineering specifications or the National Construction Code, Building Code of Australia and Australian Standards. Advice from qualified professionals should be sought if there is an apparent conflict between these details and not override any legislative requirements of the States and Territories. All components must be supplied by SOPREMA. SOPREMA reserves the right to alter or upgrade details at any time without prior notice.

