


- ① Plywood Roof Deck
- ② SOPREMA Primer and SOPREMA Vapour Barrier
- ③ PIR Thermal Insulation Board and SOPREMA PU Adhesive
- ④ SOPREMA Adhesive
- ⑤ SOPREMA FLEECE BACK PVC waterproofing membrane
- ⑥ Welding
- ⑦ SOPREMA PVC Dropper
- ⑧ Liquid PVC

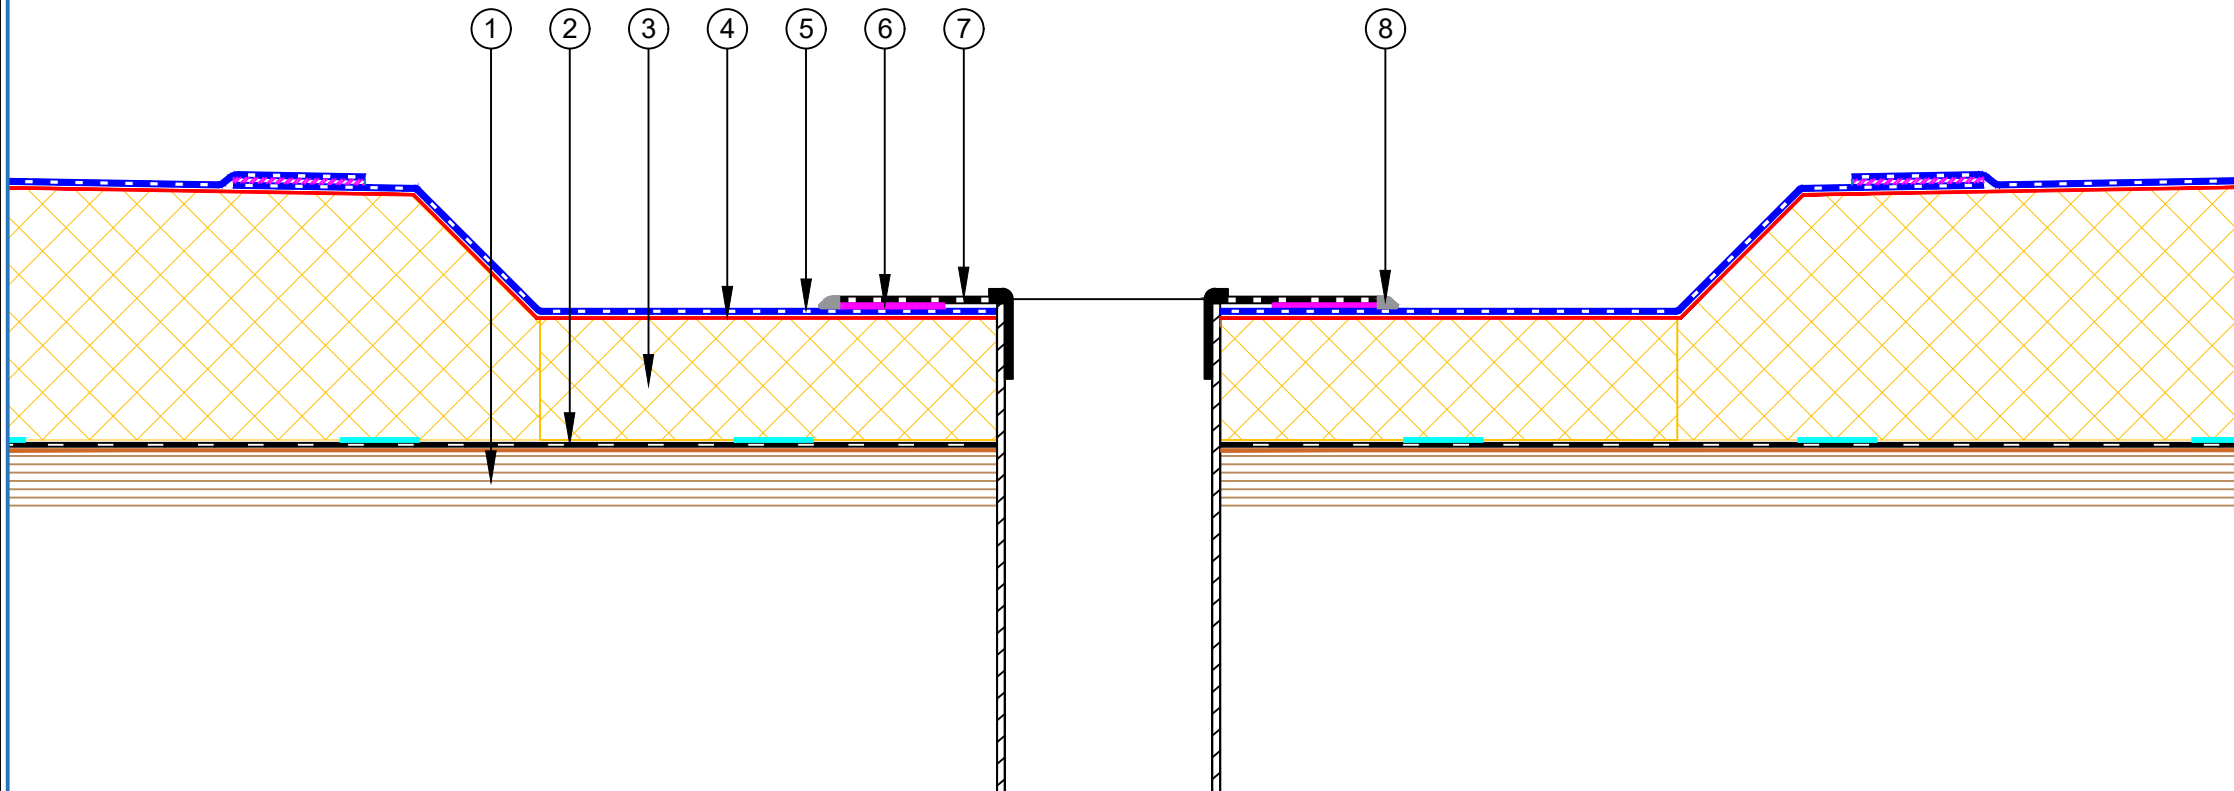

	PROJECT :		Insulated Plywood with Fleece Back PVC system			
	TITLE :		Drainage Droppers Detail			
	NUMBER :		PFIRP-D5b		SCALE :	NTS
	DRAWN BY :		NKT	DATE :	09-Jun-2026	REVISED :
	This detail is intended as a guide only to waterproofing. The guidelines are general and refer to typical applications only. No part of this detail is intended to override or supersede architectural and engineering specifications or the National Construction Code, Building Code of Australia and Australian Standards. Advice from qualified professionals should be sought if there is an apparent conflict between these details and not override any legislative requirements of the States and Territories. All components must be supplied by SOPREMA. SOPREMA reserves the right to alter or upgrade details at any time without prior notice.					

