


- ① Plywood Roof Deck
- ② SOPREMA Adhesive
- ③ SOPREMA FLEECE BACK TPO waterproofing membrane
- ④ Welding
- ⑤ Custom made drip Angle from SOPREMA TPO Metal Sheet
- ⑥ SOPREMA TPO waterproofing membrane
- ⑦ Liquid TPO

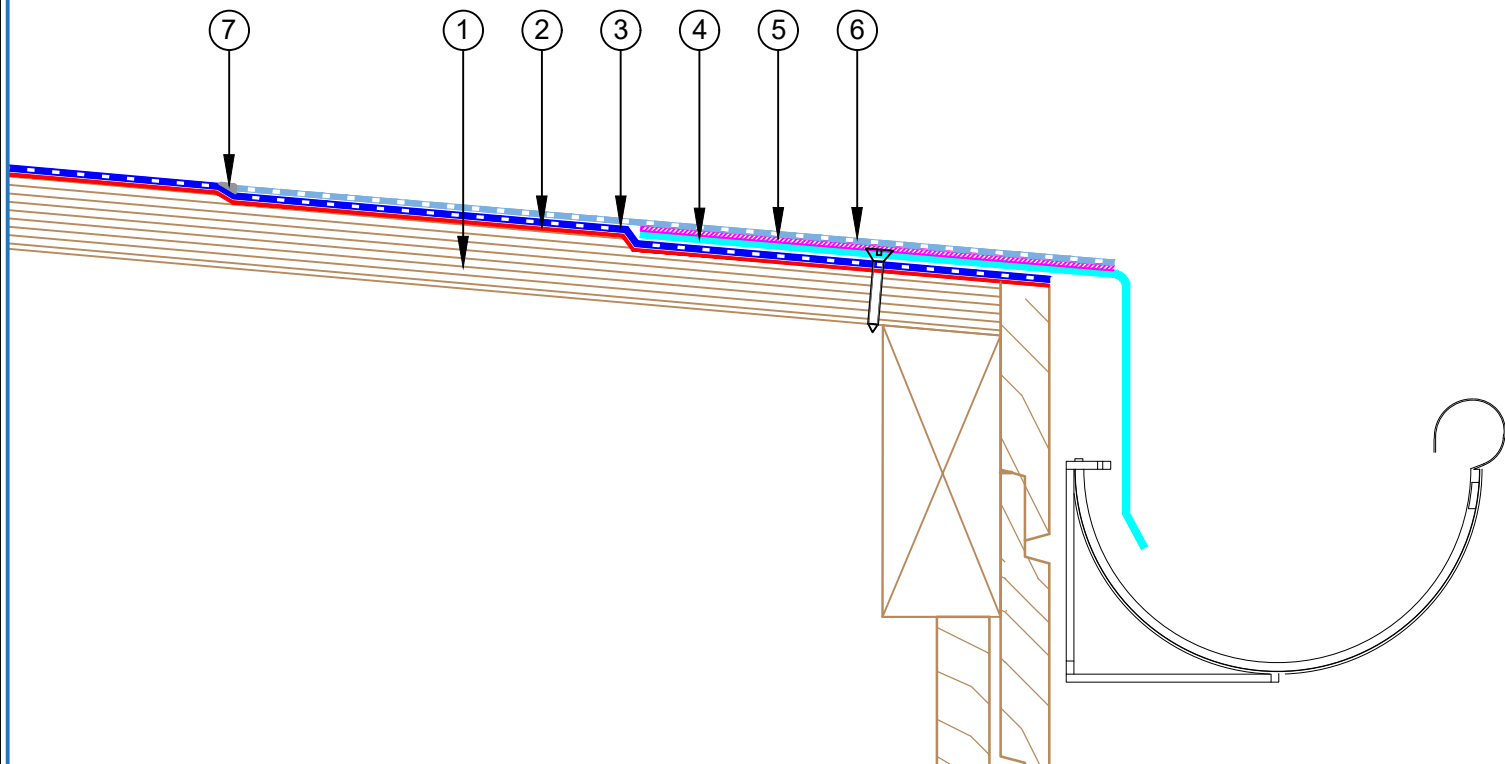

PROJECT :		Non Insulated Plywood with Fleece Back TPO system			
TITLE :		Drip Edge to spouting detail			
NUMBER :		TFNRP-D12a		SCALE :	NTS
DRAWN BY :		NKT	DATE :	10-Jun-2026	REVISED :
This detail is intended as a guide only to waterproofing. The guidelines are general and refer to typical applications only. No part of this detail is intended to override or supersede architectural and engineering specifications or the National Construction Code, Building Code of Australia and Australian Standards. Advice from qualified professionals should be sought if there is an apparent conflict between these details and not override any legislative requirements of the States and Territories. All components must be supplied by SOPREMA. SOPREMA reserves the right to alter or upgrade details at any time without prior notice.					

