


- ① Plywood Roof Deck
- ② SOPREMA Adhesive
- ③ SOPREMA FLEECE BACK TPO waterproofing membrane
- ④ Welding
- ⑤ SOPREMA TPO Dropper
- ⑥ Liquid TPO

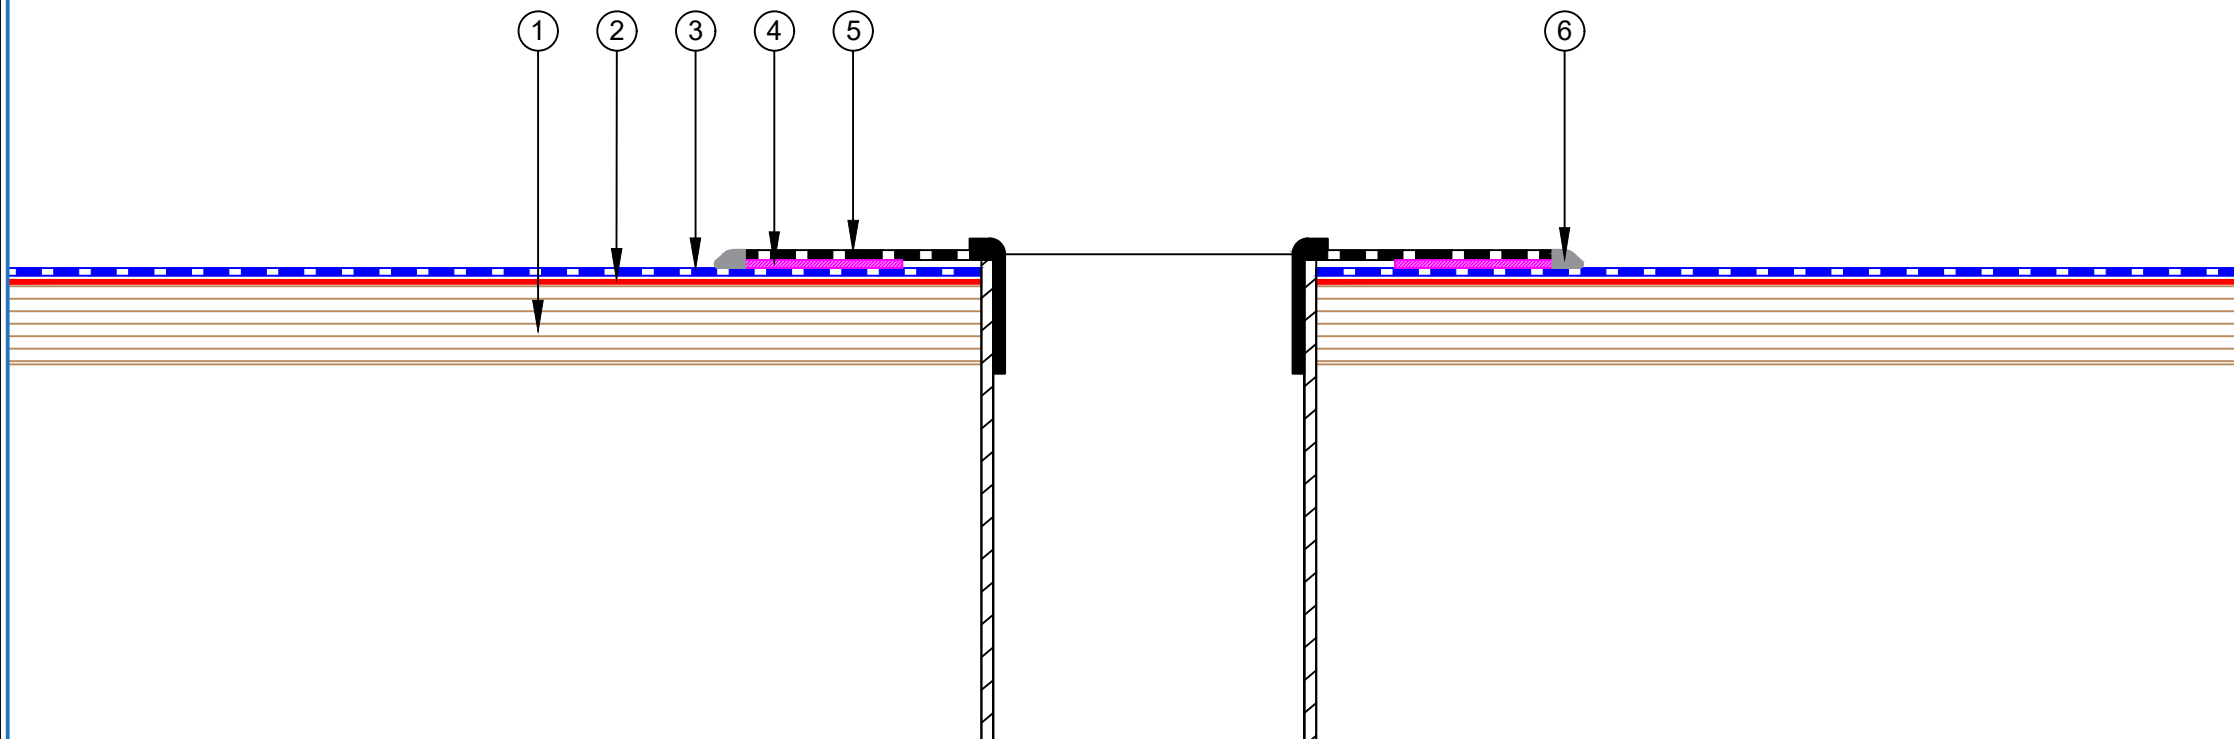

	PROJECT :		Non Insulated Plywood with Fleece Back TPO system			
	TITLE :		Drainage Dropers detail			
	NUMBER :		TFNRP-D5b		SCALE :	NTS
	DRAWN BY :		NKT	DATE :	10-Jun-2026	REVISED :
	This detail is intended as a guide only to waterproofing. The guidelines are general and refer to typical applications only. No part of this detail is intended to override or supersede architectural and engineering specifications or the National Construction Code, Building Code of Australia and Australian Standards. Advice from qualified professionals should be sought if there is an apparent conflict between these details and not override any legislative requirements of the States and Territories. All components must be supplied by SOPREMA. SOPREMA reserves the right to alter or upgrade details at any time without prior notice.					

