


- ① Plywood Roof Deck
- ② SOPREMA Adhesive
- ③ SOPREMA FLEECE BACK TPO waterproofing membrane
- ④ SOPREMA M1-Sealant
- ⑤ SOPREMA E-Curb
- ⑥ SOPREMA 1-Part Pourable Sealant

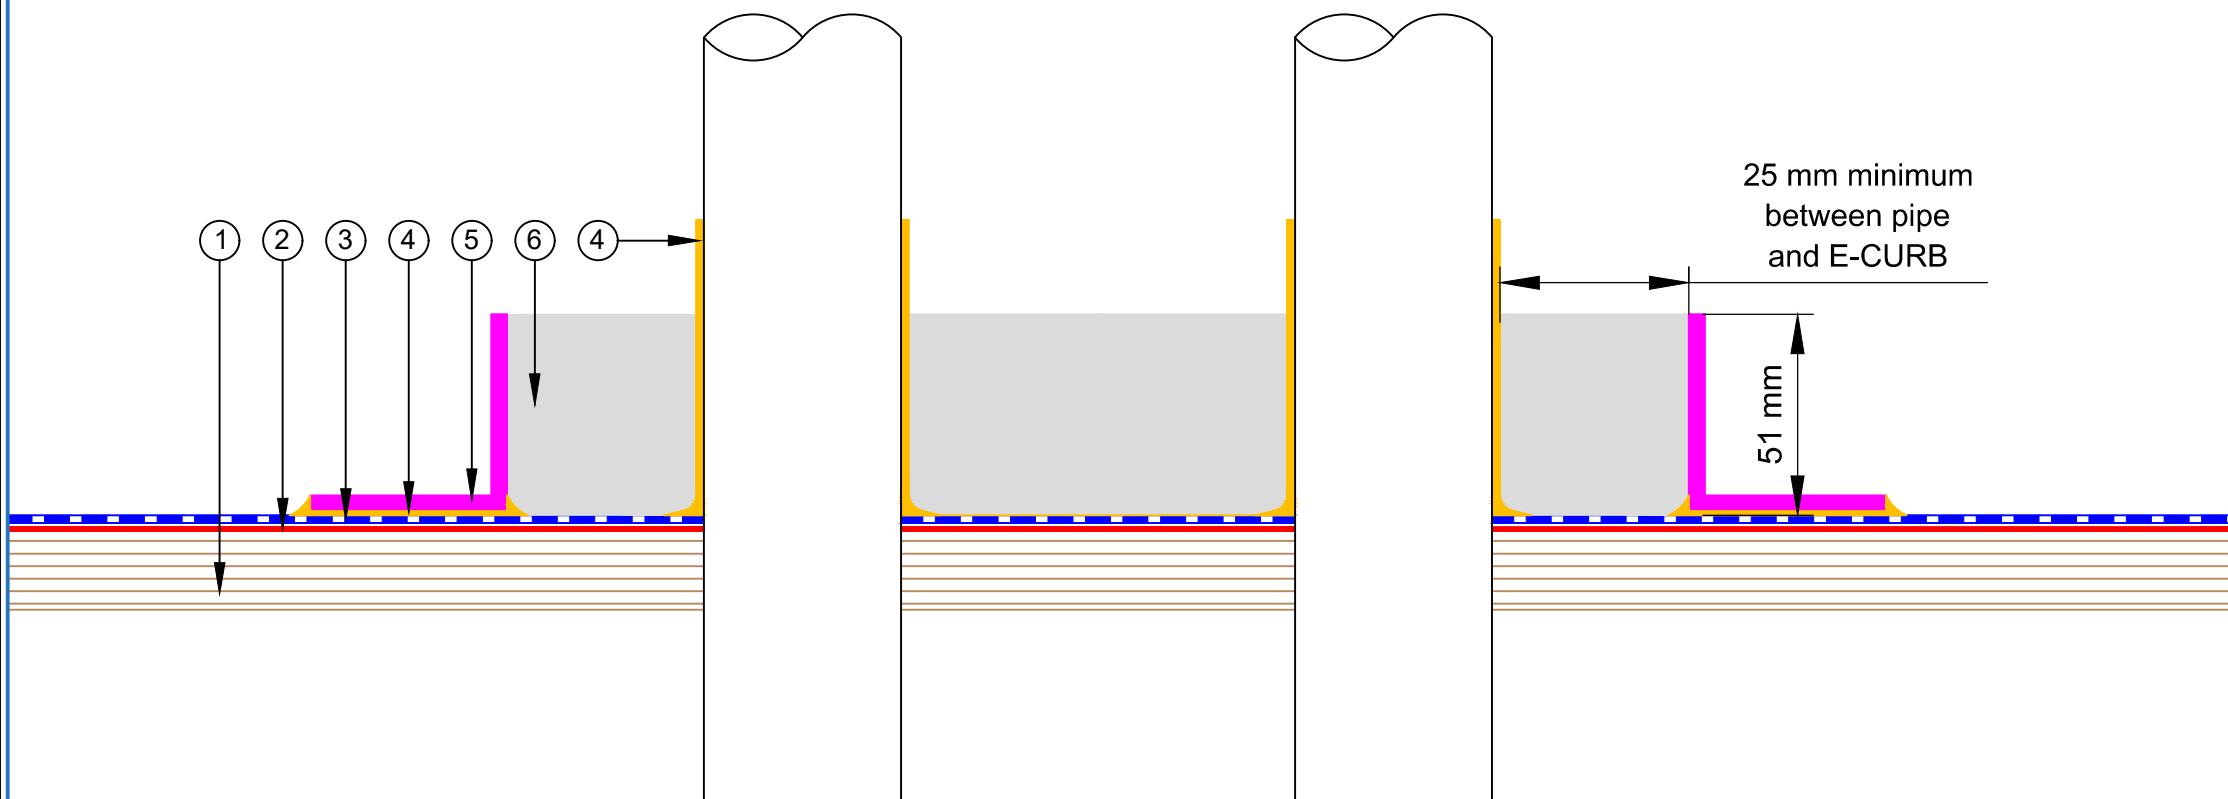

PROJECT :	Non Insulated Plywood with Fleece Back TPO system				
TITLE :	Penetration with chemlink detail				
NUMBER :	TFNRP-D11a			SCALE :	NTS
DRAWN BY :	NKT	DATE :	10-Jun-2026	REVISED :	
This detail is intended as a guide only to waterproofing. The guidelines are general and refer to typical applications only. No part of this detail is intended to override or supersede architectural and engineering specifications or the National Construction Code, Building Code of Australia and Australian Standards. Advice from qualified professionals should be sought if there is an apparent conflict between these details and not override any legislative requirements of the States and Territories. All components must be supplied by SOPREMA. SOPREMA reserves the right to alter or upgrade details at any time without prior notice.					

