


- ① Plywood Roof Deck
- ② SOPREMA Primer and SOPREMA Vapour Barrier
- ③ PIR Thermal Insulation Board and ENDUROFLEX SOPREMA PU Adhesive
- ④ SOPREMA Adhesive
- ⑤ SOPREMA FLEECE BACK TPO waterproofing membrane
- ⑥ Welding
- ⑦ SOPREMA TPO Metal 40×40 mm angle fixed at 150 mm centres
- ⑧ SOPREMA contact adhesive
- ⑨ SOPREMA TPO waterproofing membrane
- ⑩ Fixings by others
- ⑪ Epoxy
- ⑫ SOPREMA Alsan Flashing Quadro

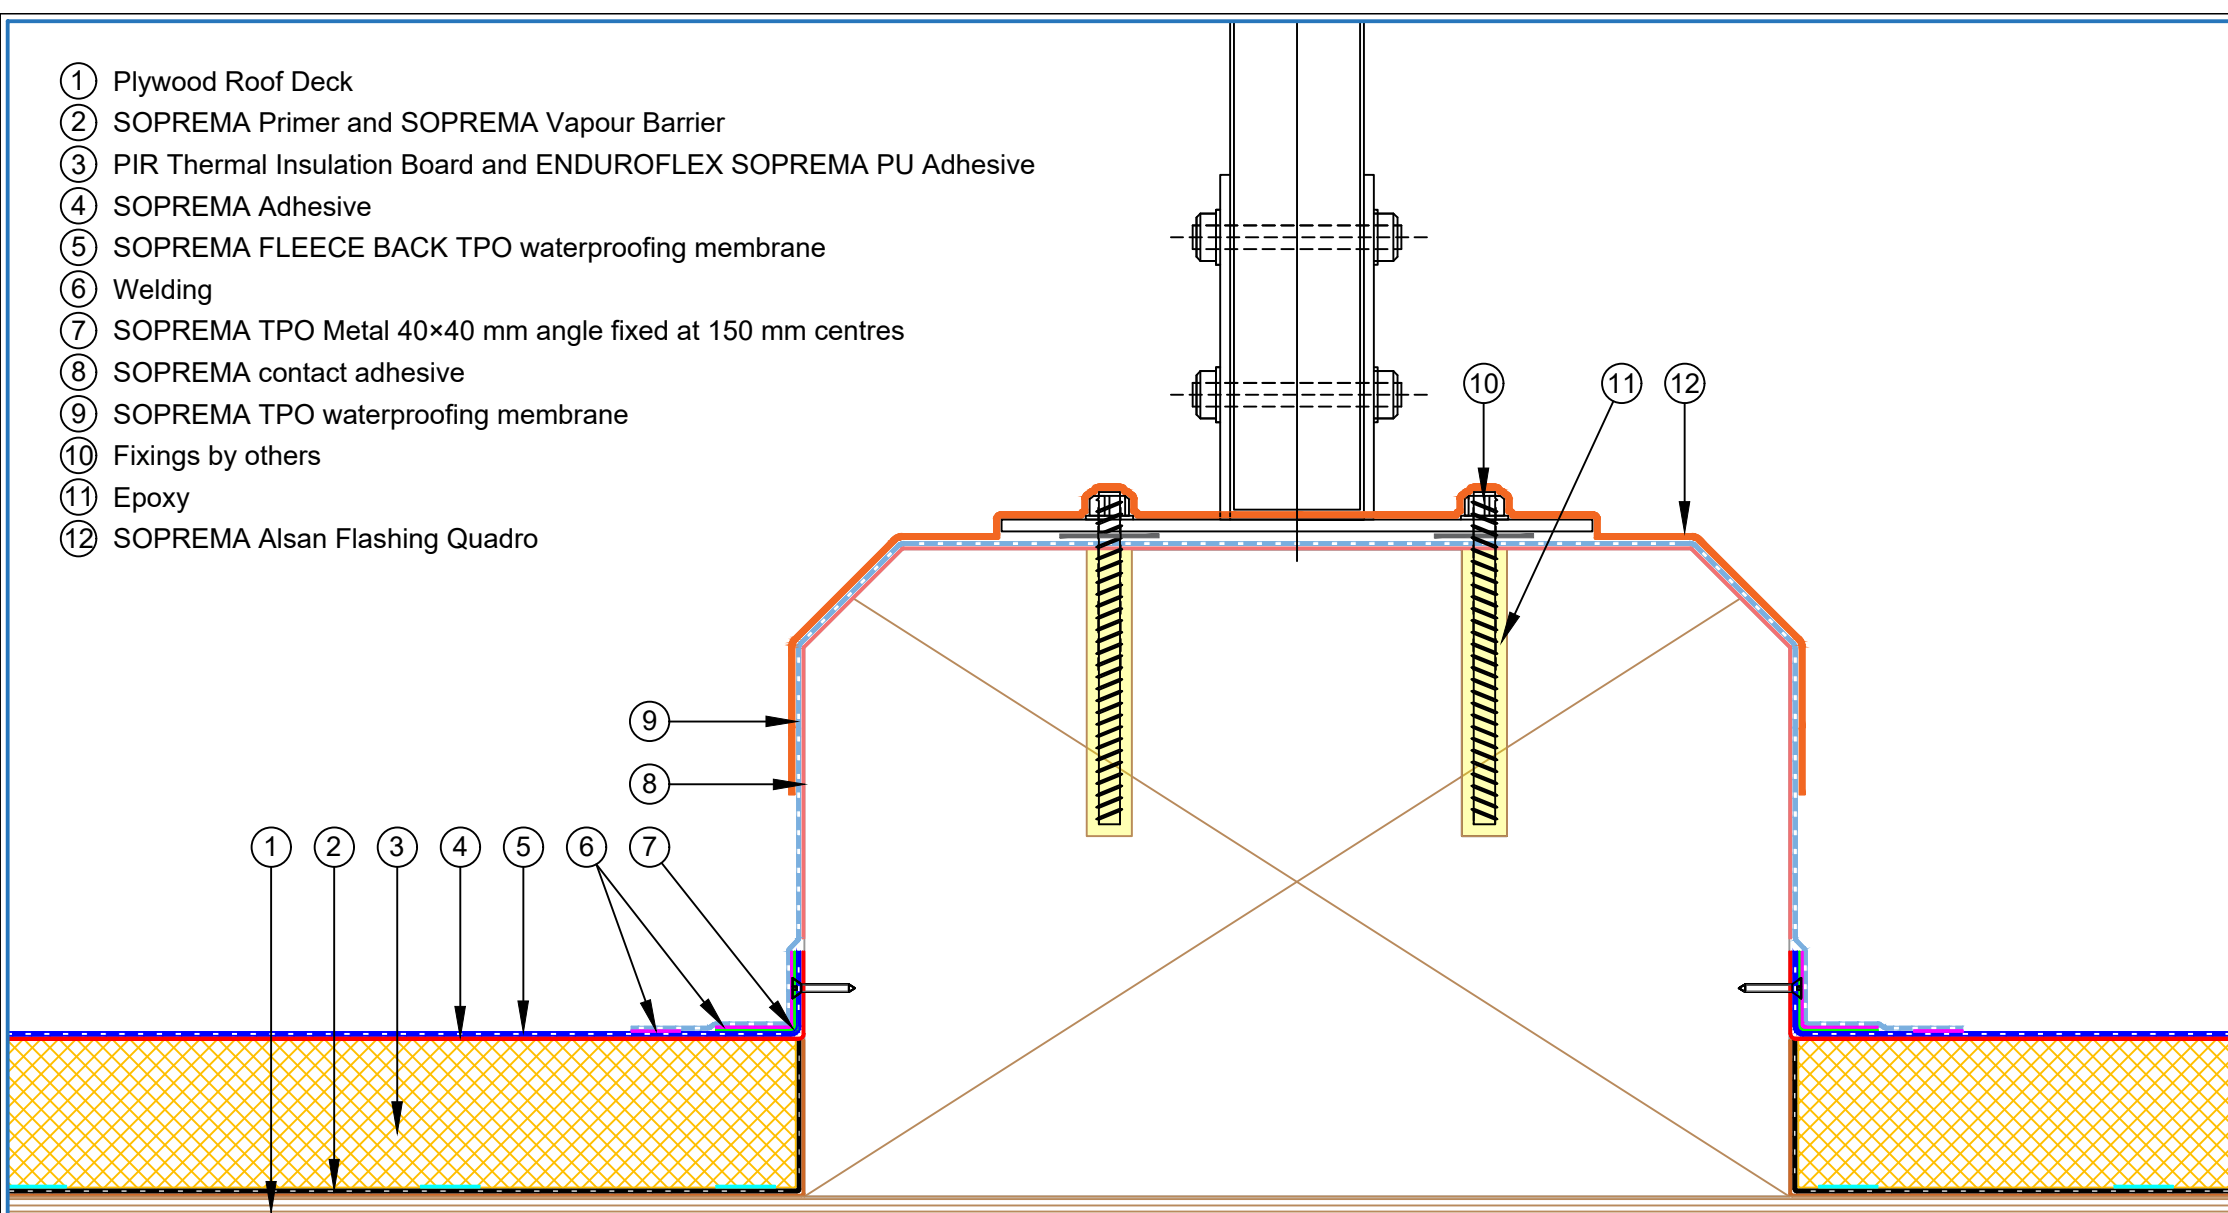

PROJECT : Insulated Plywood with Fleece Back TPO system

TITLE : Hob and Fixings Detail

NUMBER : TFIRP-D7c

SCALE : NTS

DRAWN BY : NKT

DATE : 09-Jun-2026

REVISED :

This detail is intended as a guide only to waterproofing. The guidelines are general and refer to typical applications only. No part of this detail is intended to override or supersede architectural and engineering specifications or the National Construction Code, Building Code of Australia and Australian Standards. Advice from qualified professionals should be sought if there is an apparent conflict between these details and not override any legislative requirements of the States and Territories. All components must be supplied by SOPREMA. SOPREMA reserves the right to alter or upgrade details at any time without prior notice.

